

## The Sheffield SS 700-GF-S2

A stainless steel, 7" separator in gas service with 2 filters configured in series

Designed and built for routine applications requiring dual porosity filtration

The **SS 700-GF-S2** is recommended for gas samples with light to moderate particulate and light to moderate liquid contamination. These routine applications require a high performing, reliable separator with 2 excellent hydrophobic filters, providing more efficient filtration by using a 15 micron filter in the first chamber and a 2 micron filter in the second chamber. The SS 700-GF-S2 is recommended for all but the most demanding applications. The Sheffield patented dual chamber separator provides maximum separation of condensable and particulate while the second, polishing chamber provides final clean-up.

Kinetic Separation Technology is the most innovative technology available today for sample conditioning.

The Sheffield patented dual chamber separator provides maximum separation of liquids and particulate. Although kinetic energy will physically separate impurities, it will not alter the chemical composition of the sample.

Features	Benefits
Dual graduated porosity hydrophobic filtration in series	→ Heavy contaminants separated in first chamber and remainder contaminants polished in the second chamber results in the most efficient sample conditioning
Extremely Versatile	→ Operates across a wide range of pressure, flow rates, and temperatures
Hydrophobic Fluorocarbon Teflon® lined filters	→ Can handle significant amounts of free water or particulate without clogging
Kinetic Energy Separation	→ The lower temperature at the kinetic separation results in greater condensing, further maximizing separation
Operates at 2psi or less differential pressure	→ Will not push water through the hydrophobic filter
Dual chamber construction	→ Maximizes separation and Filtration; longer filter life
No moving parts	→ Less maintenance greater reliability
Straight fittings with O-ring seals	→ Easier filter changes
No internal obstructions in first chamber	→ Minimal backpressure



The Sheffield Kinetic Separator uses kinetic energy to separate the representative analyzer sample from impurities found in a process stream. This is accomplished by establishing a flow path through the 1st chamber and reversing the flow of a relatively small Bypass sample. Solid contaminants and immiscible liquids in the liquid samples will not negotiate this complete reversal of flow direction and exit the bottom of the separator. The Kinetic Energy caused by this reversal initially removes the impurities from the Bypass stream through gravity and inertia. To further effect this separation and filtration a second kinetic chamber with a hydrophobic filter polishes the sample. The second chamber also experiences Kinetic Energy Separation and removes the remaining impurities from the Slip Stream. The sample is lighter than immiscible liquids and solids (particulates) in a liquid sample.

## How It Works

Initially, the flow path enters the first chamber. System pressure forces a reduced Bypass flow in the reverse direction; the main stream flow continues through the first chamber and exits the bottom of the separator. Gravity, inertia, and cooling combine to cause kinetic separation of the Bypass stream. The sample is lighter than condensate and particulate in gas sample.

The **First Chamber** of the Sheffield Kinetic Separator is designed for installation directly in-line to the Fast Loop sample transport system or within the sample conditioning system. This model embodies a special 10 inch, 15 micron Teflon-lined (hydrophobic) self-cleaning low pressure drop Fluorocarbon filter. The Kinetic Effect acts as a pre-filter. Most of the heavier contaminants are separated in the first chamber.


The **Second Chamber** separates and filters only the relatively small amount of Slip Stream sample going to the analyzer which greatly enhances filter life. The second chamber is a Kinetic Energy polishing chamber, aided with a special 6 inch, 2 micron Teflon®-lined (hydrophobic) self-cleaning low pressure drop filter. The filter element in this chamber has a special Teflon®-lined interior, which repels water and particulate as these impurities pass through the filter. Finally, both chambers exit the bottom of the separator to a common juncture with the return flow. These attributes combine to make the Sheffield Kinetic Separator virtually maintenance free.

The **SS700GF-S2** is designed for a Medium to Medium Heavy particulate and water contamination in gas sample stream. It can be installed in the Fast or Bypass Loop. The Kinetic Energy Separation acts as a pre-filter for particulate and condensable removal. It employs a 15 micron 6" hydrophobic filter in a series configuration with a 2 micron 6" filter for a coarse to fine graduated porosity which offers excellent purity for a sustained period.



[www.sheffieldseparators.com](http://www.sheffieldseparators.com)

email: [info@sheffieldseparators.com](mailto:info@sheffieldseparators.com)  
Ph: 409-945-2168 • Cell: 409-789-2739

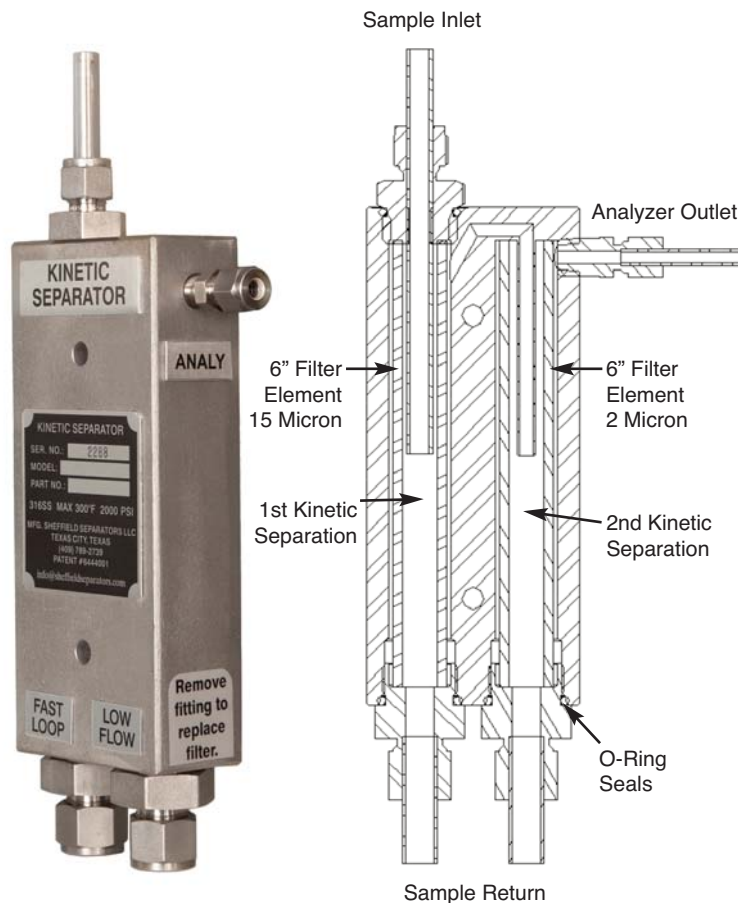

### SPECIFICATIONS

- Maximum Pressure: 2,000 PSIG
- Minimum Pressure: 2 PSIG - Vacuum application with pump or eductor
- Maximum Temperature: 300° F
- Pressure Drop: 2 PSIG
- Flow Rate:  
The flow rate specified for the sample system is sufficient for the separator. For best results, the first chamber flow should exceed that of the second chamber.

Glenn Sheffield



CCST Level III

Teflon® is a registered trademark of E.I. DuPont  
Kalrez® is a registered trademark of DuPont Performance Elastomers L.L.C.  
Patent # 6,444,001 of the Sheffield Kinetic Separator (other patents pending)



Copyright© 2015 Sheffield Separator  
All rights reserved. Printed in USA